


MONTAGEVOORSCHRIFT

MOUNTING INSTRUCTIONS


# ZV-A

MONTAGE - ANLEITUNG

INSTRUCTIONS DE MONTAGE

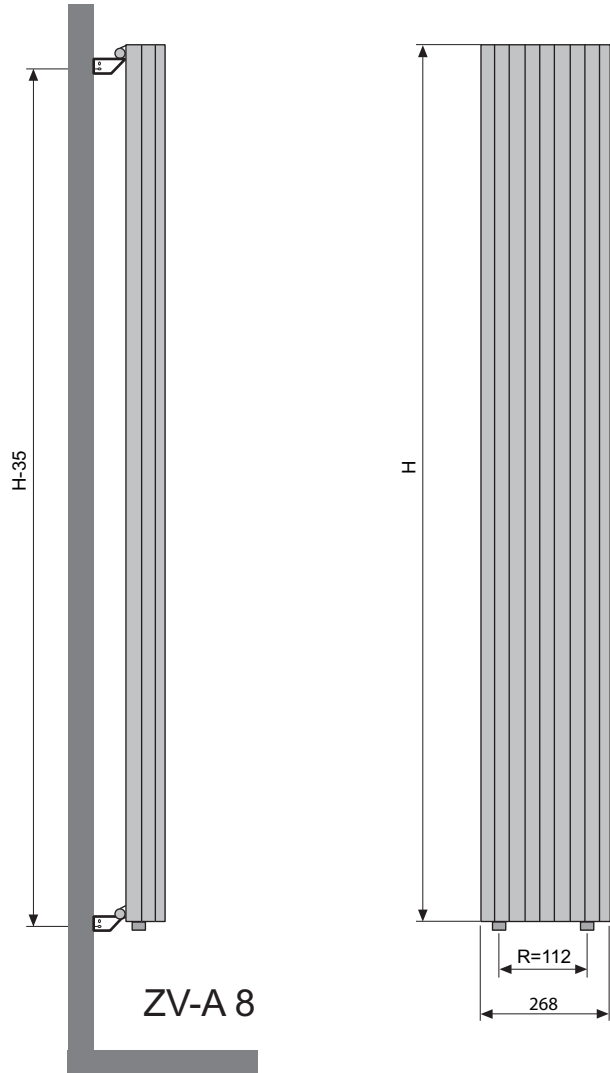

ZV-A 8

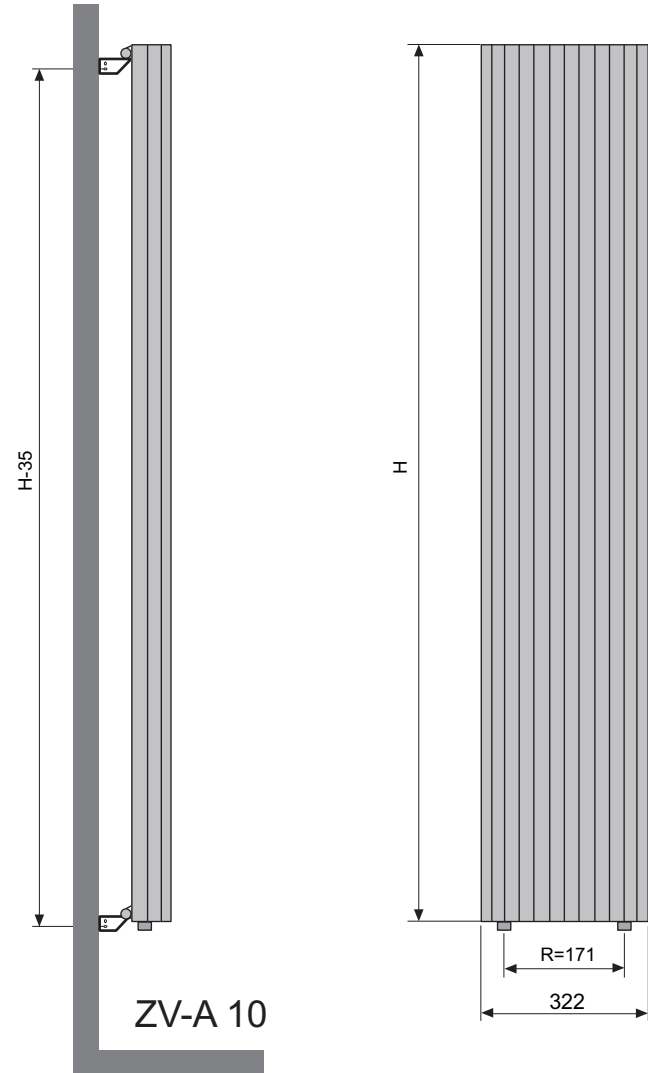

ZV-A 10

Werkdruk : Max. 4 bar  
Betriebsdruck : Max. 4 bar  
Pression de service : Max. 4 bar  
Operating pressure : Max. 4 bar

