
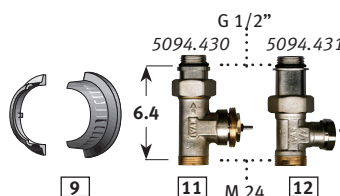
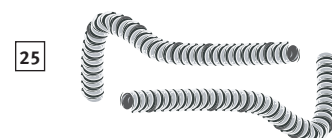
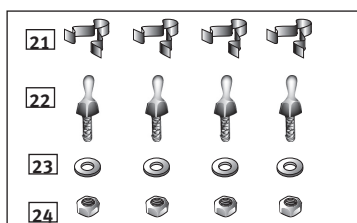
 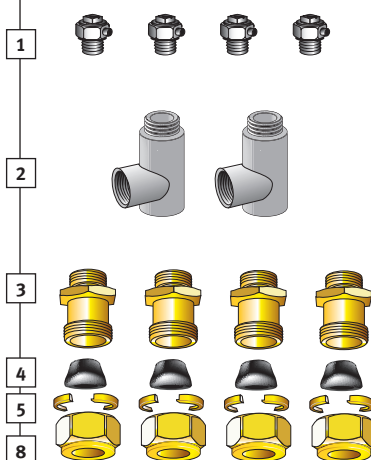



Montagehandleiding
Instructions de montage
Montagehinweis
Mounting instructions

vrijstaand
sur pied
freistehend
free-standing

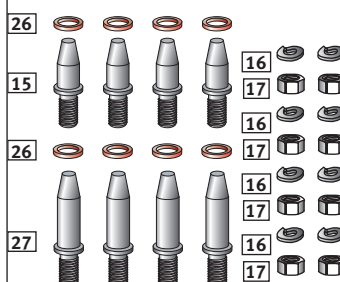

Klemkoppelingen voor ventielen: zie Jaga prijslijst.
Klemmringverschraubungen für Ventile: siehe Jaga
Preisliste.
Raccords bichônes pour vannes: voir liste des prix Jaga.
Sleeve couplings for valves: see Jaga price list.


**SET 2**

N De thermostaatkop voor ventiel 5094.430 dient separaat meebesteld te worden (niet meegeleverd).

F La tête thermostatique pour la vanne 5094.430 doit être commandée séparément (non fournie).

D Der Thermostatkopf für das Ventil 5094.430 soll separat mitbestellt werden (wird nicht mitgeliefert).


E The thermostatic head for valve 5094.430 has to be ordered separately (not included).

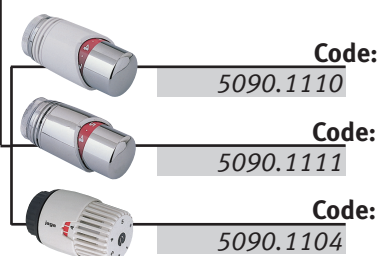


1

Ø	27.8	31.3	34.8
E	7.5	9.4	11.3
Z (±)	11	12.5	16
Y	2	3.15	3.3

$$Y = E\left(\frac{Z}{2}\right)$$

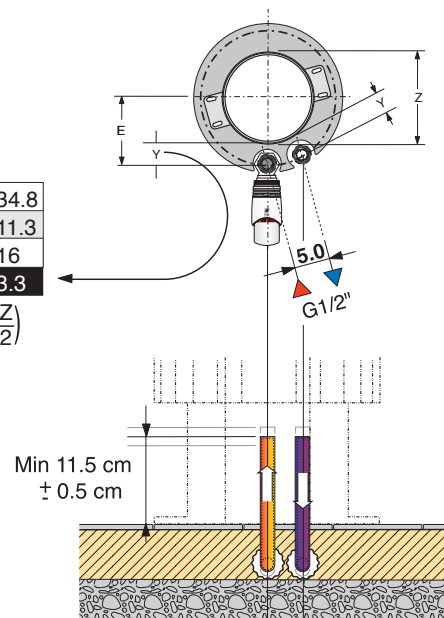


2

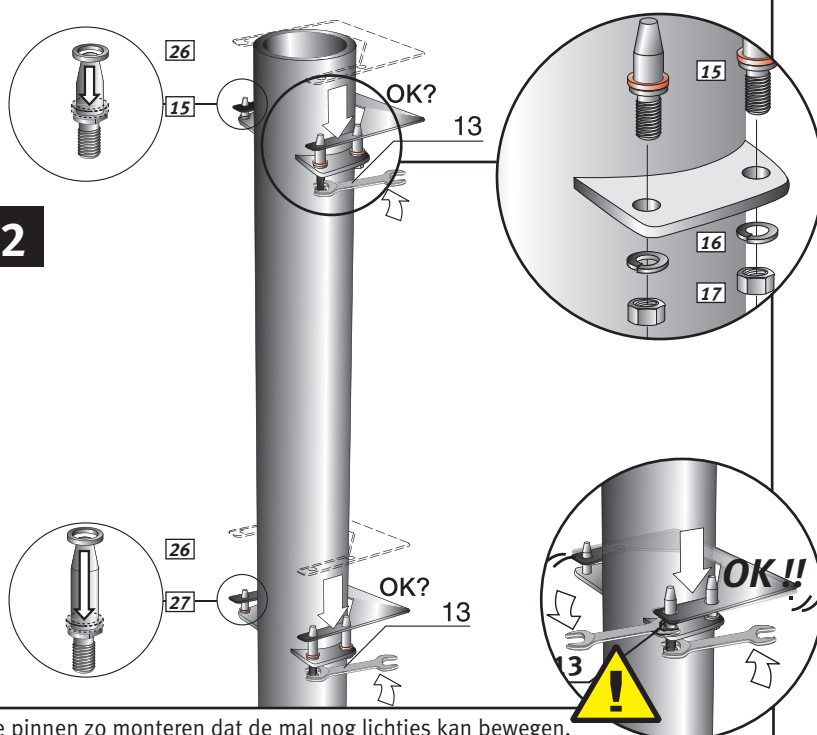


De pinnen zo monteren dat de mal nog lichtjes kan bewegen.
Monter les chevilles d'une manière que le gabarit peut bouger légèrement.
Die Bolzen montieren so daß die Schablone noch leicht bewegt werden kann.
Mount the pins this way the template slightly can be moved.

3

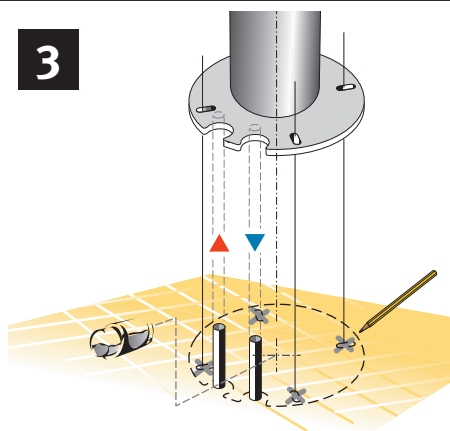


4


niet meegeleverd
non fournie
nicht mitgeliefert
not included

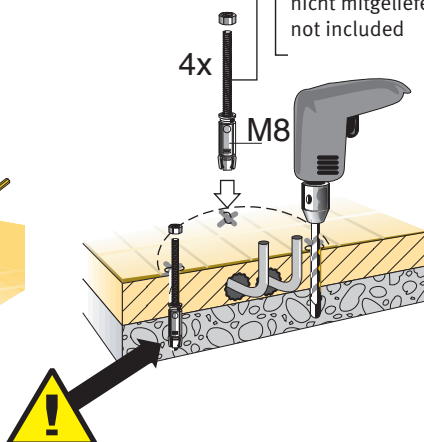


5

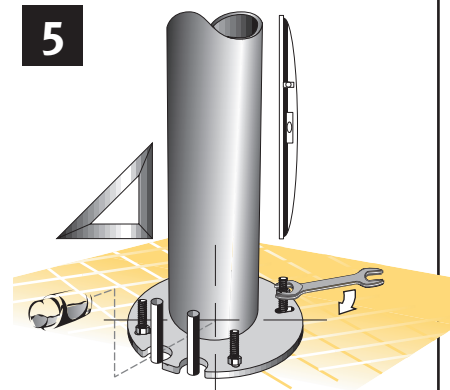

FASE 4: VOORBEREIDING IGUANA ONDERDELEN
 PHASE 4: PREPARATION DES PIÈCES DÉTACHÉES DE L'IGUANA
 PHASE 4: VORBEREITUNG IGUANA EINZELTEILE
 PHASE 4: PREPARATION IGUANA PARTS

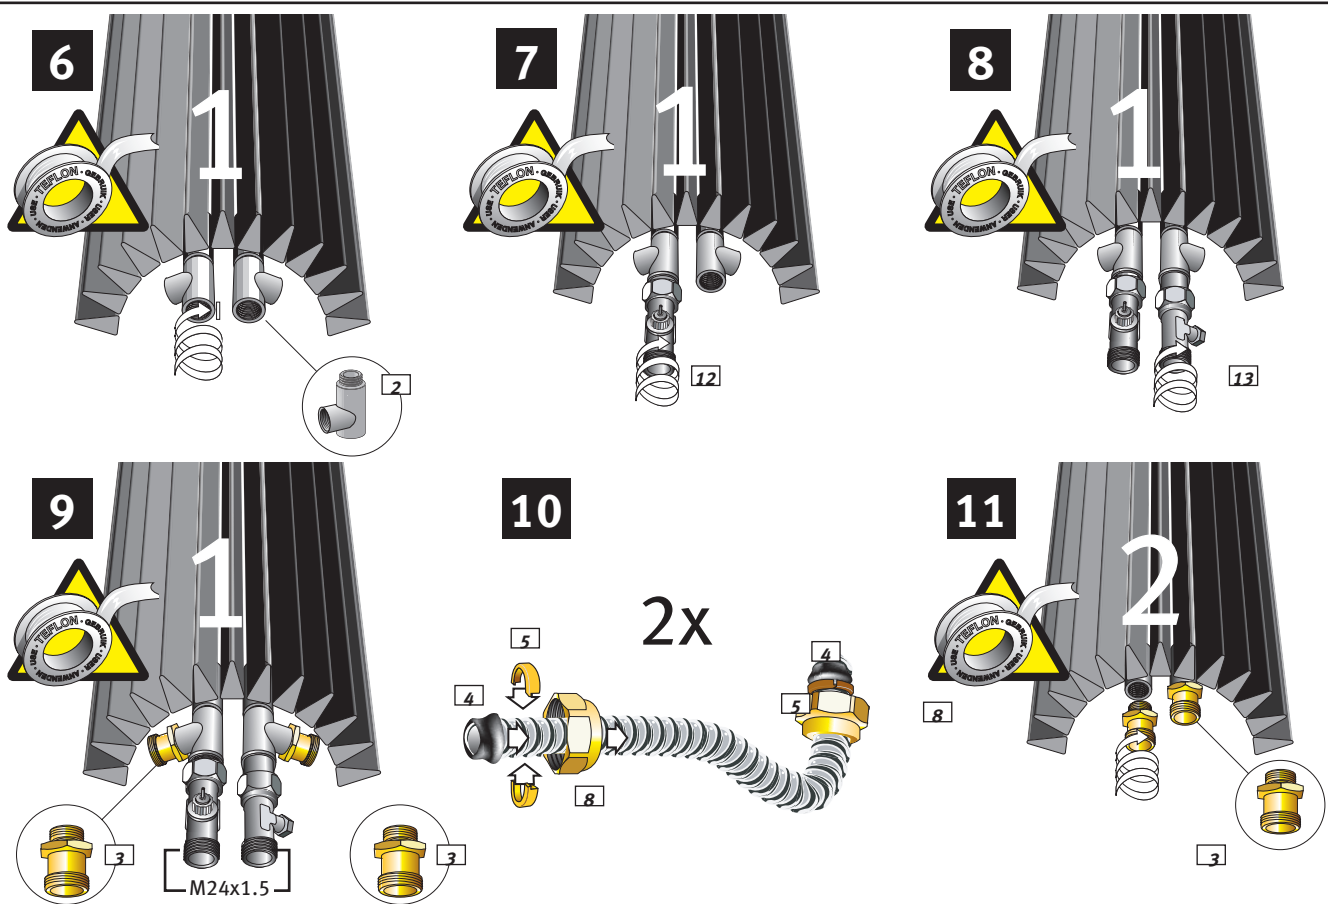


FASE 5: SAMENSTELLEN IGUANA CIRCO
 PHASE 5: ASSEMBLAGE DE L'IGUANA CIRCO
 PHASE 5: ZUSAMMENSETZUNG IGUANA CIRCO
 PHASE 5: ASSEMBLY IGUANA CIRCO

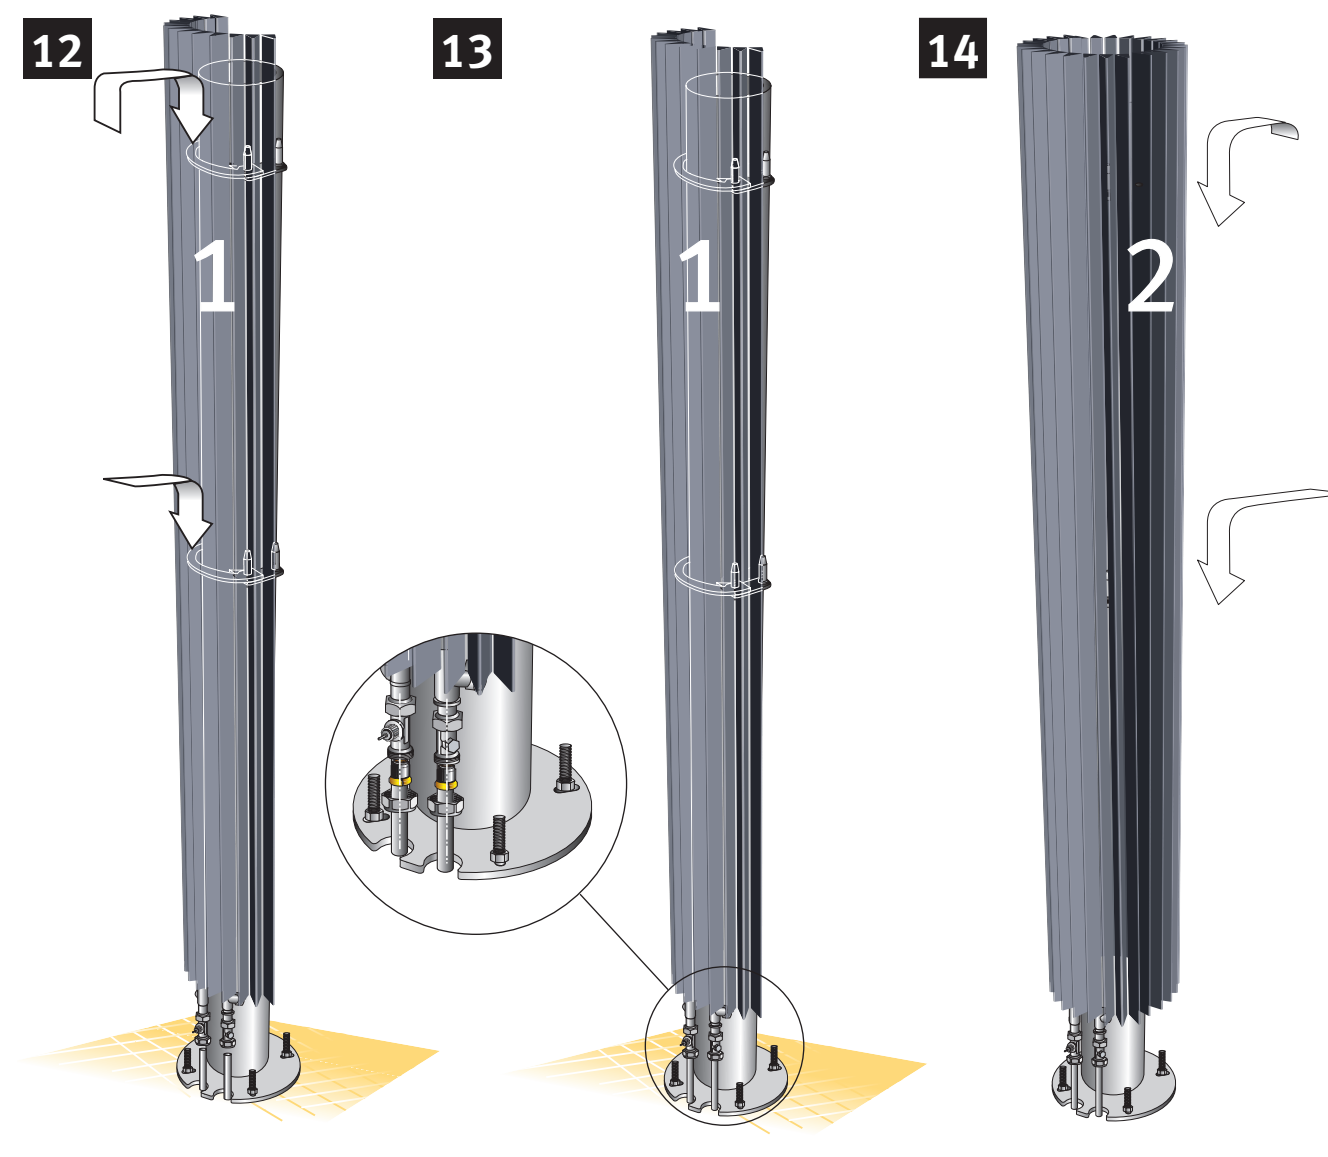


FASE 6: AANSLUITINGEN
 PHASE 6: RACCORDEMENTS
 PHASE 6: ANSCHLÜSSE
 PHASE 6: CONNECTIONS


15

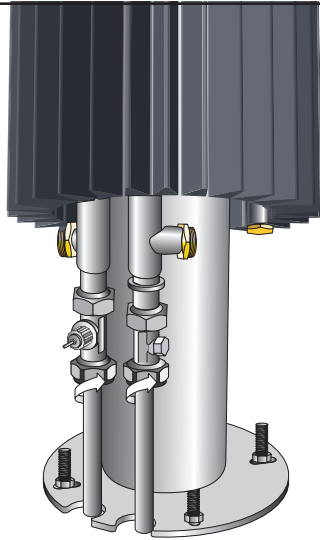

16

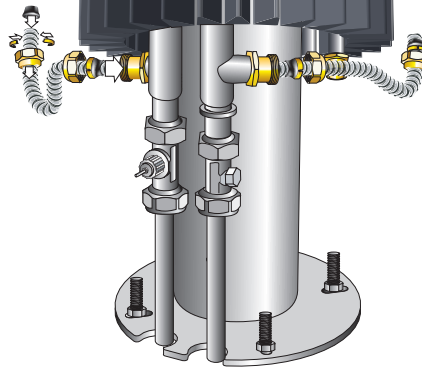


17

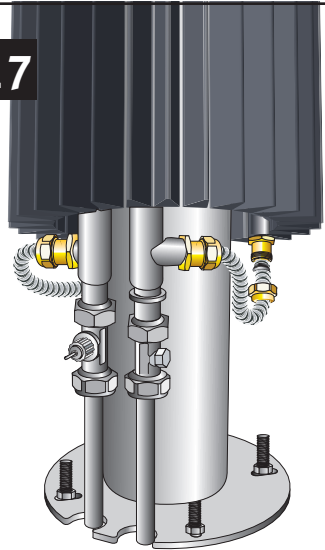


FASE 7: PLAATSIING AFDEKPLAAT
 PHASE 7: PLACEMENT DU CACHE
 PHASE 7: PLAZIERUNG ABDECKPLATTE
 PHASE 7: PLACING COVER


18

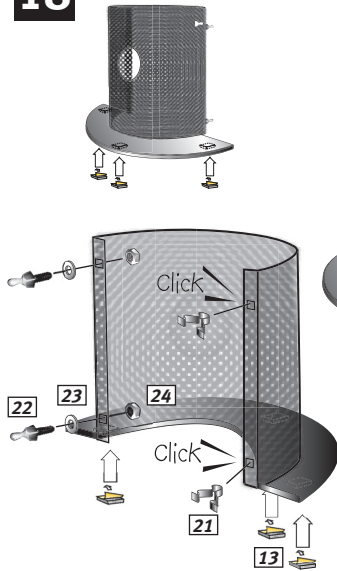

19

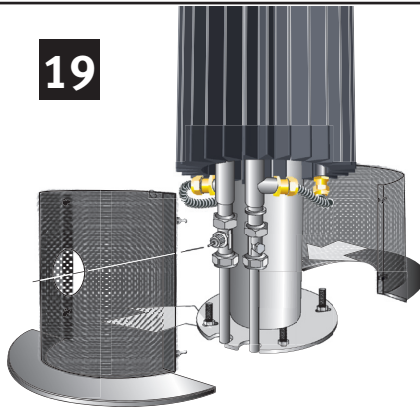

20

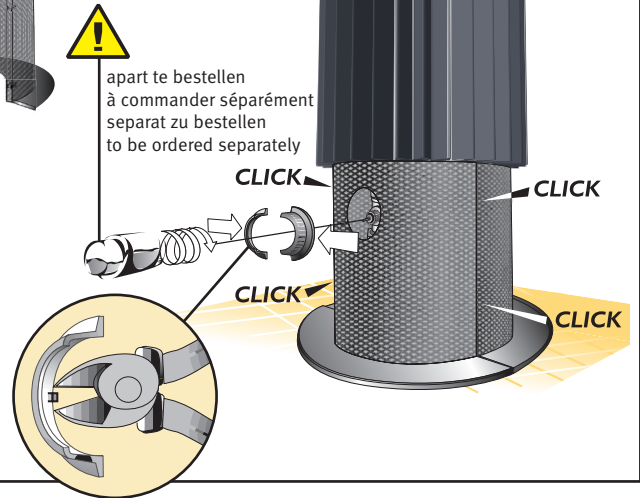

FASE 8: ONTLUCHTING
 PHASE 8: PURGE
 PHASE 8: ENTLÜFTUNG
 PHASE 8: AIR VENTING

